

OFF-SET BRACKETS - USED WHEN YOU WANT TO BRING SIGNS NEARER THE CARRIAGEWAY OR WHEN IT IS NECESSARY TO GIVE A SIGN EXTRA CLEARANCE FROM THE EDGE OF CARRIAGEWAY

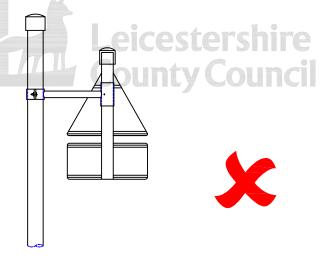

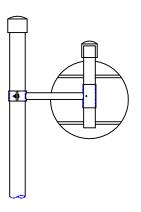




NOTE

1.See Drg No SD/12/22

 2.In exceptional circumstances signs of area less than 0.3 sq m may be attached via a single off—set bracket.

ALWAYS USE TWO OR MORE OFF-SET BRACKETS

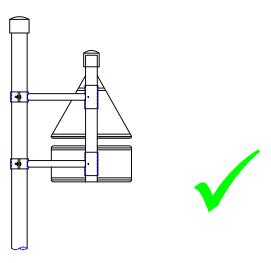



©Crown copyright 2007. All rights reserved. Use of this image is limited to viewing on-line and printing one copy. Leicestershire County Council



TRANSPORTATION AND

WASTE MANAGEMENT

STANDARD DRAWING

TRAFFIC SIGNS

SIGN ASSEMBLIES - DOS AND DON'TS (PART 4)

		100019271.			
DRAWING NUMBER	DATE				
SD/12/6	APRIL 2007				
AUTOCAD REF		2011			
		SCALE			
K:\GENERAL\D9997STDDRG\SD126		NOT TO SCALE			
			Rev	Date	Notes on Revision